



www.customcargrills.com
info@customcargrills.com

customcargrills.com LLC
PO Box 90004
Grand Rapids, MI 49509
(616) 889-2985

Year: 2000-2002
Make: Pontiac
Model: Sunfire GT

INSTALLATION INSTRUCTIONS




What's in the Box: (3) Grill Mesh Pieces, (8) Clips.




Tool List: Needle Nose Pliers

Mesh Installation:


1. Locate the clip points. Use diamond locations circled in red.

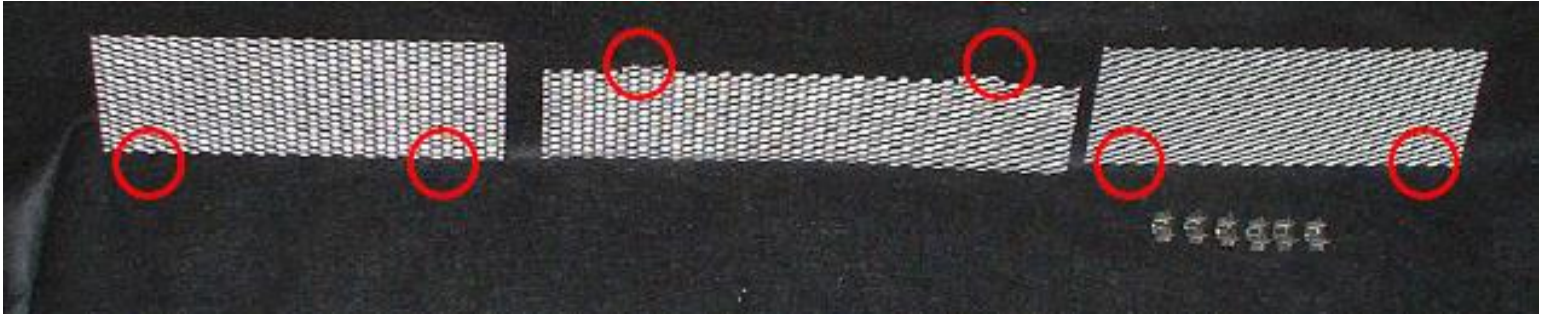

2. Hook the two prongs on the clip around the diamonds and tighten down like so.

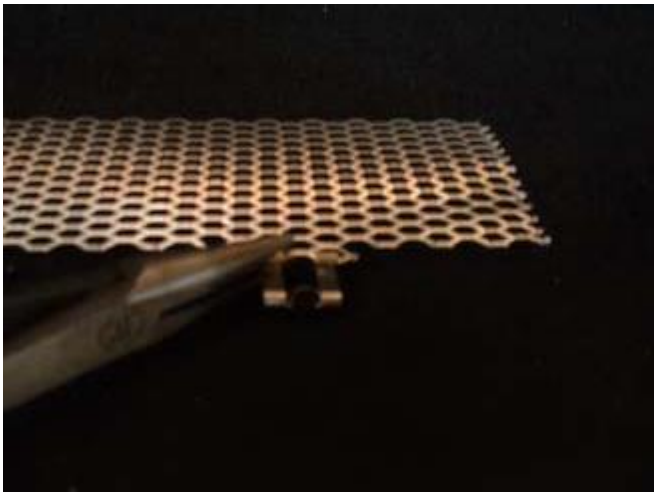

3. Then tighten down the back part of the clip. If you do not tighten down enough, the clip will not hold well on the bumper. If you tighten down too much, it may be difficult to install.

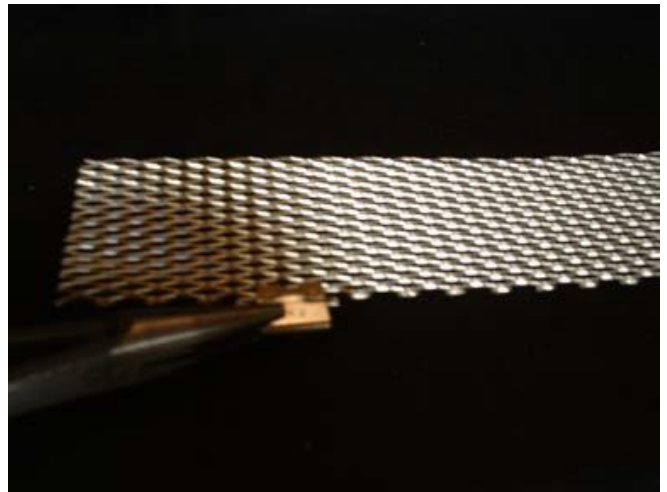

4. Repeat for other clip areas.

5. Take the grill insert and make sure you understand how it is supposed to go on. The center piece is a little longer and thinner than the outer pieces.

6. Put the grill insert behind the opening and center the grill insert and push the clips onto the existing grill. You may have to get under the car to accomplish this.

7. The clips should be near the orientation of the arrows on here:



PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs. customcargrills.com llc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to info@customcargrills.com .