




INSTRUCTIONS

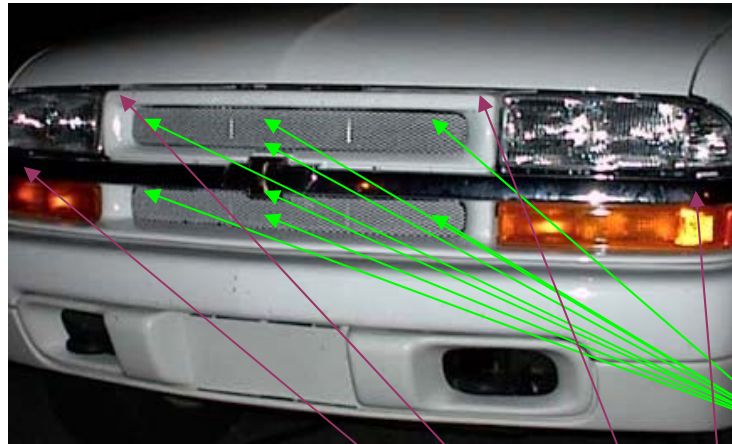

Suggested Wire Points

Materials needed: Grills (included)
Metal Wire (included)
Wire Cutters
Pliers

Estimated Install time: about an hour

1. Start by opening your hood latch and propping your hood up.
2. Take your front end off by gently pulling where indicated with **purple arrows**.
3. Remove the turn signal light bulb connectors.
4. The front end should be placed somewhere clean and placed face up.
5. Take the top grill (larger of the two) and place it into position. Take about 7-8" of the wire and secure each into place by attaching them to the existing grill.
 - a. Shape the wire into a "U" position.
 - b. Run the wire ends from the front through 2 adjacent holes that are by one or more stock plastic bars.
 - c. Twist the wire end from behind, near the base.
 - d. Once hand tight, run other pieces in the same grill insert until the desired install security is achieved.
 - e. Use your pliers to tighten the wire all the way down to the desired tension and then trim the ends off with your wire cutters about 1/2" from the base.
6. Take the bottom grill (smaller of the two) and place it into position. Take about 7-8" of the wire and secure each into place by attaching them to the existing grill.
 - a. Shape the wire into a "U" position.
 - b. Run the wire ends from the front through 2 adjacent holes that are by one or more stock plastic bars.

- c. Twist the wire end from behind, near the base.
 - d. Once hand tight, run other pieces in the same grill insert until the desired install security is achieved.
 - e. Use your pliers to tighten the wire all the way down to the desired tension and then trim the ends off with your wire cutters about ½” from the base.
7. Place grill back on Blazer (make sure all the push clips line up before pressing in).
Be sure to connect your turn signals lights too.
8. Close hood and enjoy new customized grill.