




INSTRUCTIONS

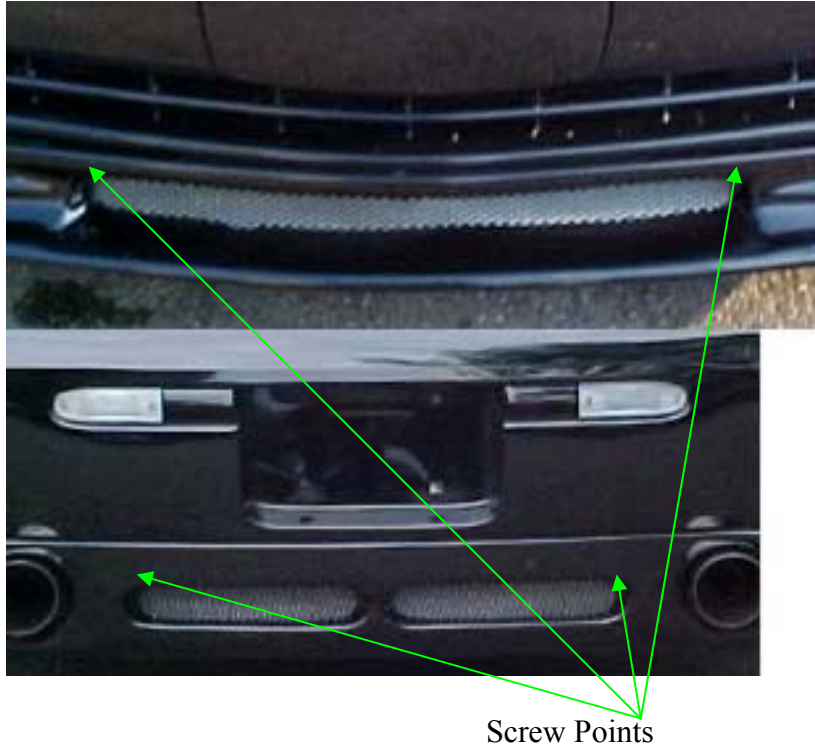

Screw Points

Materials needed: Grills (included)
Screws
Adhesive of your choice

Estimated Install time: 1 hour

1. Shape and bent grill insert to fit the opening in the front air dam
2. Drill holes where they can not be seen to insert screws at top corners of both back and front.
3. Use body panel adhesive (or epoxy can be used) where needed along bottom to keep the insert from being able to move.