




INSTRUCTIONS

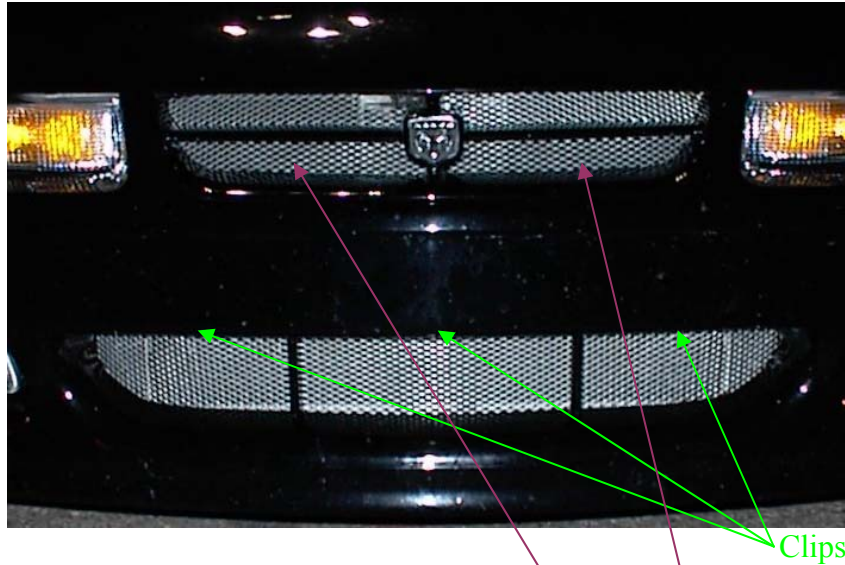


Materials needed: Grills (included)
13/32 Socket
5/16 Socket
Permatex or similar adhesive
Wire Ties

Estimated Install time: hour or more

1. Start by opening your hood.
2. Remove the two screws at the top of the upper grill
3. Take your front end off by gently pulling where indicated with purple arrows with a flathead screwdriver under the grill in between the front bumper.
4. Remove the grill from the car.
5. The grill should be placed somewhere clean and placed face up.
6. Take the two grill inserts that have clips and attach them to the lower part of the existing grill from the inside
7. The two other inserts are also placed from behind but need to be adhered to the grill with an adhesive. We suggest Permatex RTV Silicone but feel free to use an epoxy or other adhesive of your choice. Place the insert in position and wire tie them to the grill by running them through the inserts and around the grill. Then run a bead of the adhesive around the edge of the grill like pictured on the next page. Use the directions on the bottle for a proper seal.

8. Make sure your inserts look like this:

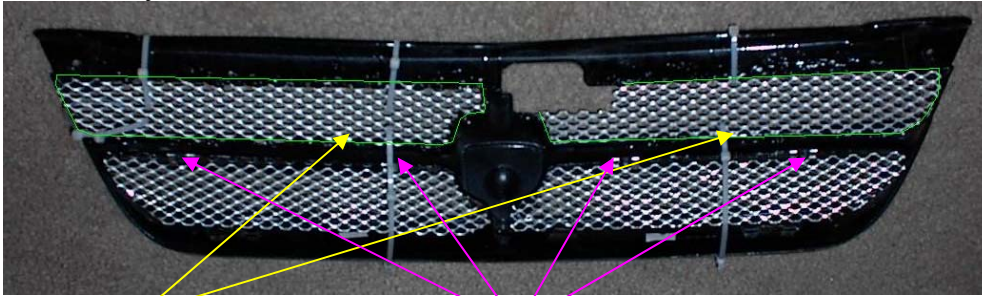

Adhesive

Clips

9. Let this dry for ½ day or so, depending on what adhesive you use
10. While that is drying take the sockets and take the plastic flap off from underneath the car. There should be a dozen screws that will be holding this piece up.
11. Once it is removed, then slide the long mesh piece up through the bottom of the bumper and make sure that it is facing so the clips will clip onto the bumper or else you will have to turn it around. Once it is in position, then just press the insert onto the existing bumper. The clips should roughly be where highlighted on the first page.
12. Reinstall the splash guard on the bottom of the car.
13. Reinstall the top part of the grill and enjoy.
14. Email me with any question at info@customcargrills.com