




INSTRUCTIONS

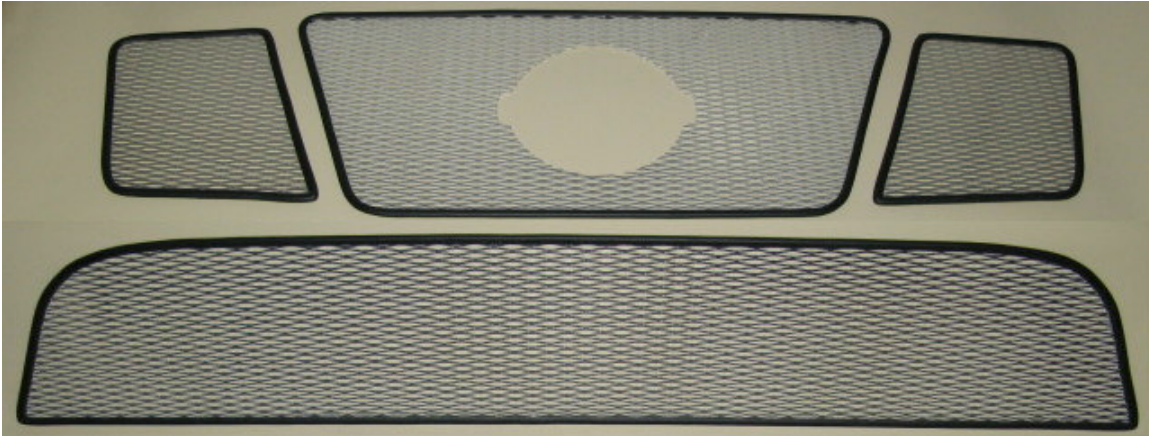

Materials needed: Cable Ties (Provided)
Wire Cutters

Estimated Install time: 30-60 minutes

1. Release the hood and prop the hood upright.
2. For the rest of the installation you will need to gain access behind the stock grill.
3. Place one of the inserts over the stock grill in the appropriate place.
4. Start to feed the cable ties in from behind. Push the "tail" part of the tie through first. The "head" part of the tie should be concealed behind the stock grill.
5. Loop the "tail" part of the cable tie through an adjacent vertical diamond in the mesh. When done properly, there should be a minimal amount of the tie shown on the front of the vehicle.
6. Loosely secure the tie. Make sure you have the tie looped around one mesh diamond and one plastic OEM diamond.
7. Repeat this step around the grill. Try to keep the ties in the corners and middle for the most secure hold.
8. Repeat step 4-6 until you have four of the tie ends through the insert.
9. When you are satisfied with the placement of the grill and the ties, fully tighten the ties.
10. Clip the ends of the ties.
11. Repeat steps 4-10 for the remainder of the inserts.

PLEASE NOTE: The instructions provided are suggested instructions. If you feel that the installation is inadequate or unsafe then please feel free to develop your own

installation techniques that fit your exact needs. These instructions were designed for grill use in off-road use areas. If you have any suggestions on how to improve our installation instructions then please email your comments to info@customcargrills.com