


Custom **CARGRILLS.COM**

INSTRUCTIONS

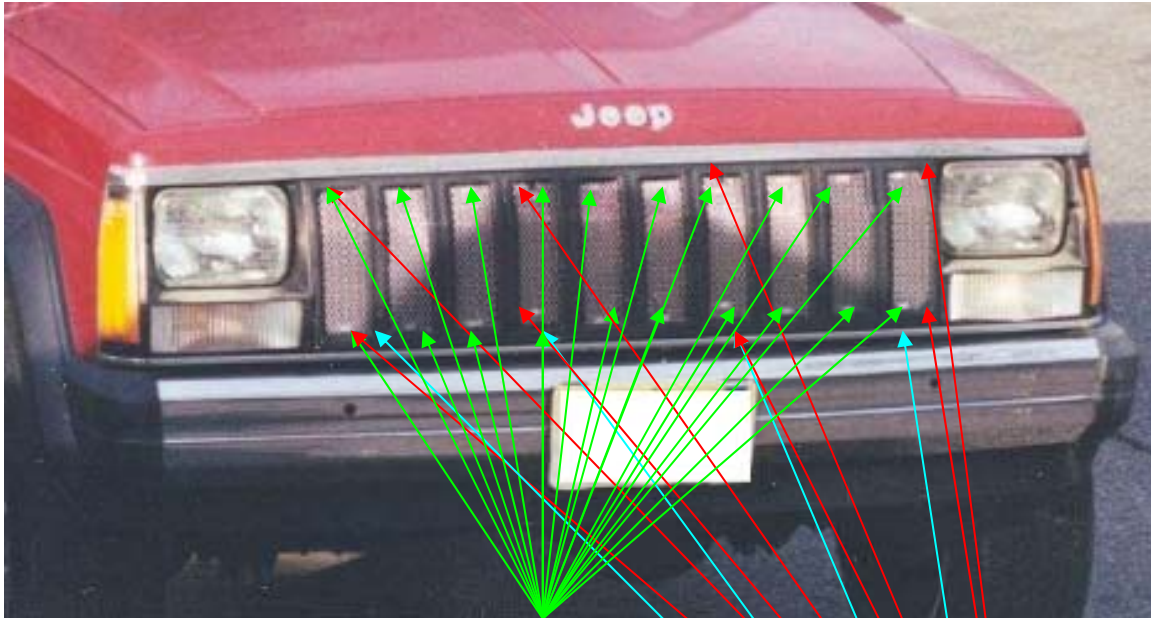

Wire-tie Points

Materials needed: Grills
20 Wire-ties
Wire cutters

Estimated Install time: about an hour

1. Start by using a phillips screwdriver to remove the screws (indicated with **red** arrows)
2. Take your front end off by gently pulling where indicated with **blue** arrows with a flathead screwdriver under the grill in between the front bumper.
3. Remove the grill from the car.
4. The grill should be placed somewhere clean and placed face up.
5. Take 6 of the inserts and place them into slot 2,3,5,6,8,9. Take 2 of the small wire-ties and secure each into place by attaching them to the existing grill.
6. Take the remaining inserts and place them into positions 1,4,7,10. Take 2 of the large wire-ties and secure each into place by attaching them to the existing grill, BUT leave as much slack as possible. Do not fasten all the way.
7. Use a pair of wire cutters to trim any of the wire-tie tails off.
8. Place grill back on Jeep (make sure all the push clips line up before pressing in).
9. Use a phillips screwdriver to install the screws back in (indicated with **red** arrows).
10. Once the grill is on, tighten down the big wire-ties to the desired tension and cut the excess off with wire cutters.