



## INSTRUCTIONS




Materials needed: Grills (provided)  
Metal Wire (provided)  
Needle Nose Pliers

Estimated Install time: 30 Minutes

1. Read instructions before installation.
2. Remove the two stock front top pieces.
  - a. You have to remove the bottom half of the insert first
  - b. You also must pry the bottom tabs up. This is usually easier to do from behind the insert.
3. Lay the grill insert over the stock insert as shown (on Page 2).
4. Take about 6-7" of the wire and bend it in a V shape and run it through two adjacent diamonds that overlay a stock horizontal bar.



5. From behind, twist the wire in spiral pattern.

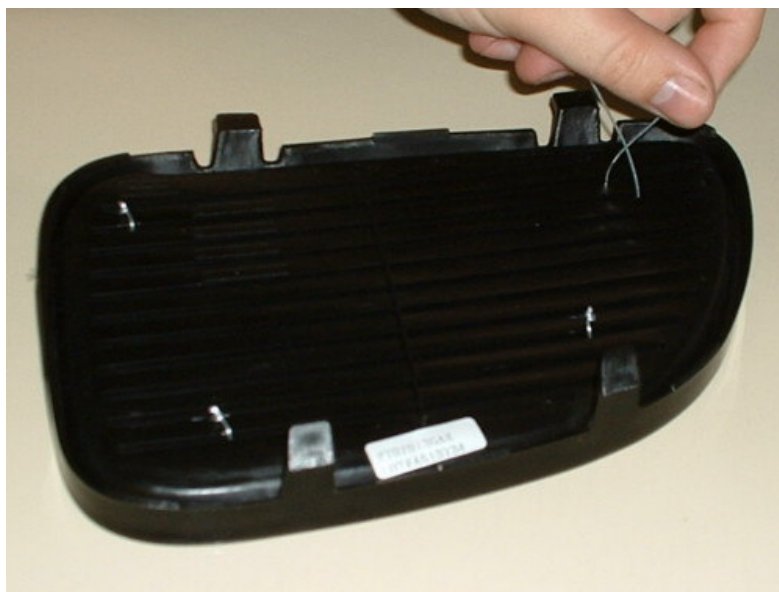

6. When you can twist it much longer, and then use a pair of need nose pliers to make a snug fit with the desired tension.



7. Once tightened to the desired tension then trim off the excess. You will still want to leave about 1/8"-1/4" on there.



8. Reinstall the top inserts. Hook the inserts in at the top and then push the bottom tabs in to place. A common mistake on the install is having the inserts positioned too high.