




INSTRUCTIONS

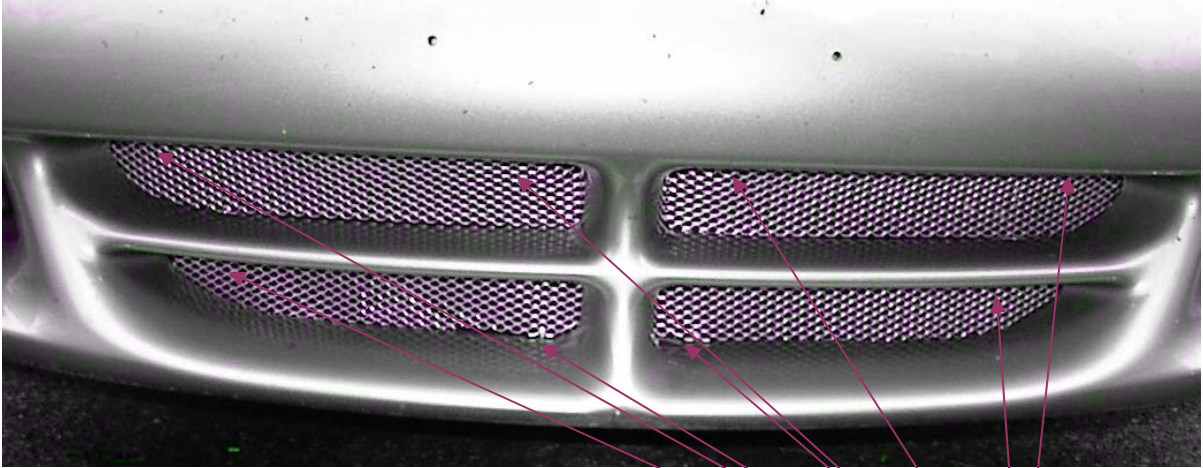


Materials needed: Grills
Needlenose Pliers


Estimated Install time: 30 minutes

Tabs

1. Start by separating the types of grills. The thinner pair with the tabs on the same size will go on the top while the set with a notch cut out of it will go on the bottom.
2. Assembly
 - a. Locate the clip points. Use diamond locations circled in red.

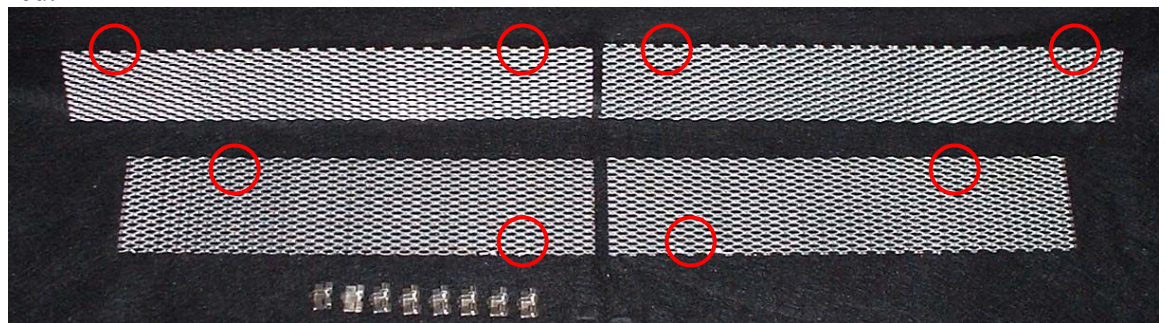


- b. Hook the two prongs on the clip around the diamonds and tighten down like so.

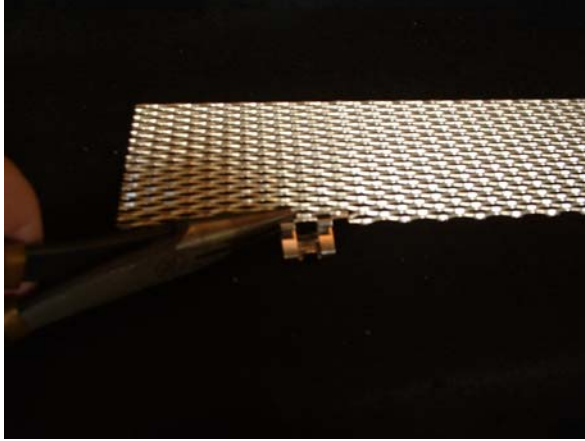

- c. Then tighten down the back part of the clip. If you do not tighten down enough, the clip will not hold well on the bumper. If you tighten down too much, it may be difficult to install.



- d. Repeat for other clip areas. For the bottom sections that have pre-cut 2 diamond section you will need to bend out the clip like so:

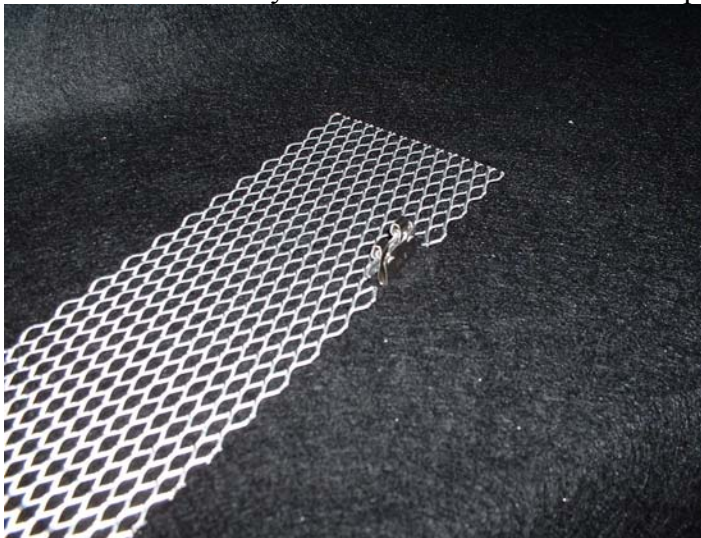

3. Take one of the pieces that will be going on the top and orient it so that the tabs are at the top of the piece and so that the tabs will be ready to slide onto the existing opening.
4. Take the grill and slide it up through the bottom opening and press the silver tabs onto the existing grill. The tabs should roughly be where purple arrows are indicating.
5. Repeat for other side
6. Take one of the pieces that will be going on the bottom and orient it so that the part that is cut out is directed towards the center of the bumper. Slide the piece behind the existing opening and with your other hand through the top opening (be VERY careful not to scrape your arm/hand) press both the silver tabs onto the existing grill.
7. Repeat for other side

Please feel free to contact us at info@customcargrills.com for any questions regarding this installation as we know that the instructions are sometimes misinterpreted and thus not installed correctly.