




## INSTRUCTIONS

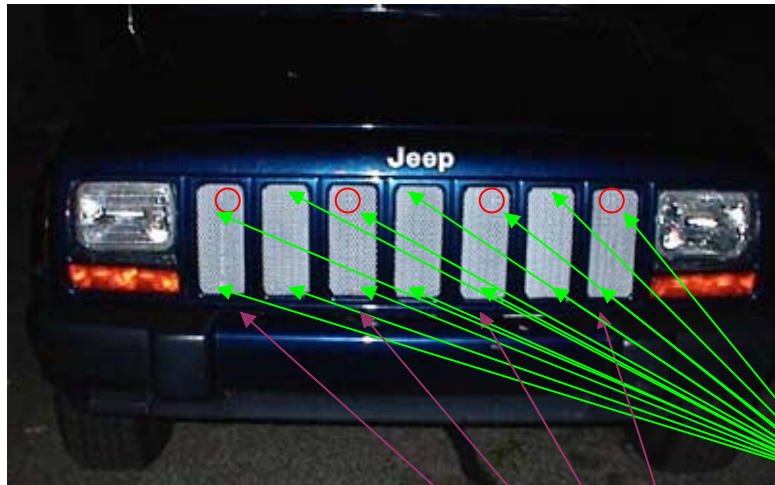

Wire Points

Materials needed: Grills (Included)  
Metal Wire (Included)  
Pliers/Wire cutters

Estimated Install time: about an hour

1. Start by using a phillips screwdriver to remove the screws (indicated with red circles)
2. Take your grill off by gently pulling where indicated with purple arrows with a flathead screwdriver under the grill in between the front bumper.
3. Remove the grill from the car.
4. The grill should be placed somewhere clean and placed face up.
5. Take 3 of the inserts and place them into positions 2,4,6. Take about 4-5" of the wire and secure each into place by attaching them to the existing grill.
  - a. Shape the wire into a "U" position.
  - b. Run the wire ends from the front through 2 adjacent holes that are by one or more stock plastic bars.
  - c. Twist the wire end from behind, near the base.
  - d. Once hand tight, run other pieces in the same grill insert until the desired install security is achieved.
  - e. Use your pliers to tighten the wire all the way down to the desired tension and then trim the ends off with your wire cutters about 1/2" from the base.

6. Take the remaining inserts and place them into positions 1,3,5,7. Take about 4-5" of the wire and secure each into place by attaching them to the existing grill, BUT leave as much slack as possible at the top.
  - a. Shape the wire into a "U" position.
  - b. Run the wire ends from the front through 2 adjacent holes that are by one or more stock plastic bars. DO THIS FOR THE BOTTOM SECTION ONLY.
  - c. Twist the wire end from behind, near the base.
  - d. Once hand tight, run other pieces in the same grill insert until the desired install security is achieved.
  - e. Use your pliers to tighten the wire all the way down to the desired tension and then trim the ends off with your wire cutters about 1/2" from the base.
  - f. For the top pieces use a much larger section of wire and loop it through so that the ends are facing out the front of the grill. Leave a lot of slack.
7. Place grill back on Jeep (make sure all the push clips line up before pressing in).
8. Use a phillips screwdriver to install the screws back in (indicated with red circles).
9. Once the grill is on, tighten down the wire to the desired tension and cut the excess off with wire cutters.