





INSTRUCTIONS

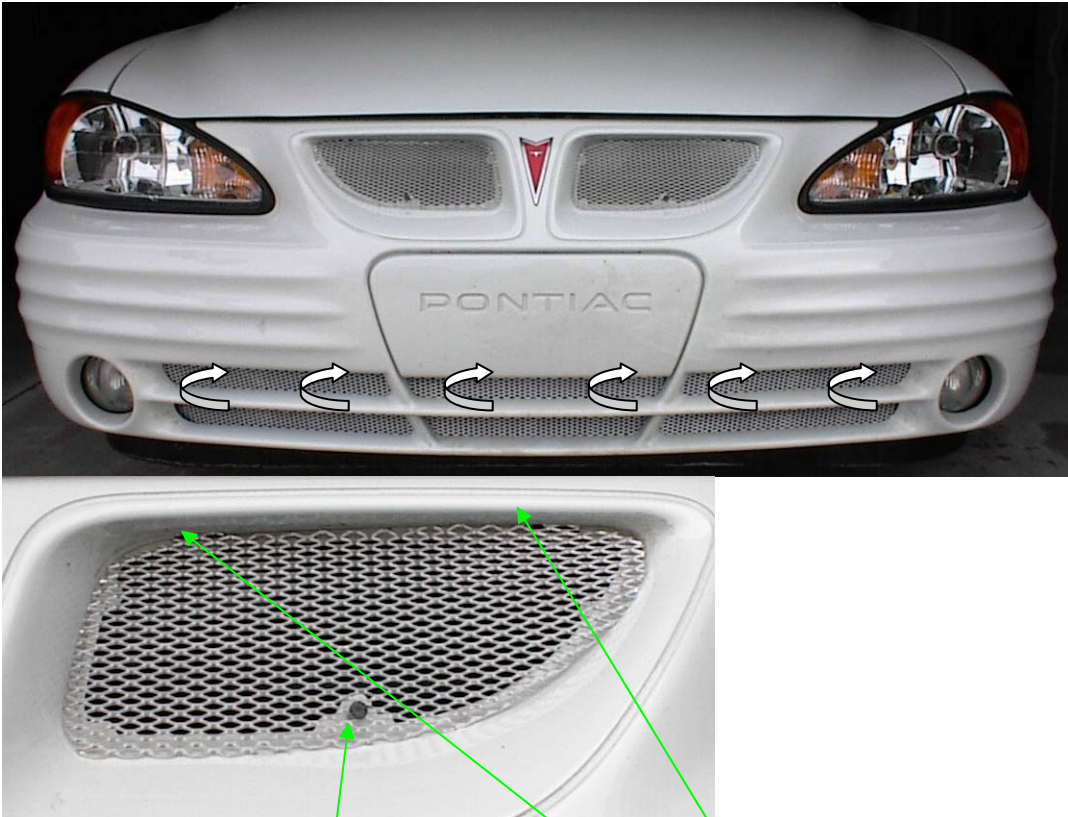


Materials needed: Grills (provided)
Torx bit screwdriver
Needlenose pliers

Estimated Install time: 30 Minutes


1. Begin by taking out the old insert w/ the torx bit screwdriver. Remove the old insert and slide the new top insert in from the bottom up. Make sure the tabs are in here and that the torx screw goes back in here
2. Before you install the bottom inserts you will have to do some assembly.
3. Insert the clips in their sections as designated.
 - a. The middle piece will require two clips 4-5 diamonds away from the edge. Make sure you apply them to the correct side.
 - b. Hook the two prongs from the clip around the two adjacent diamonds.

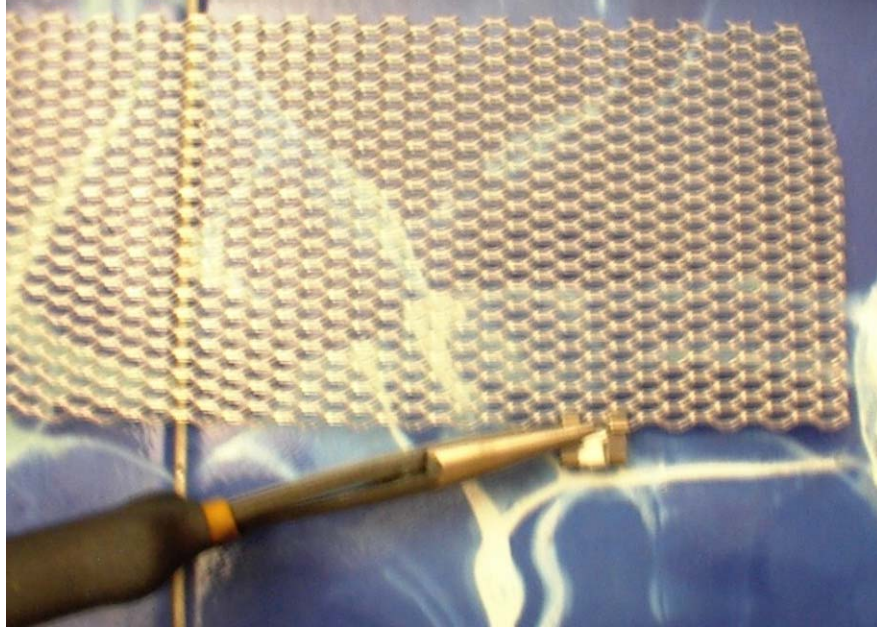

- c. Tighten down the clamping part of the clip to the desired tension. Just take your pliers and close the gap down as far as you want. If you don't tighten them down enough, they will not hold and if you tighten them too much it will be hard to install.

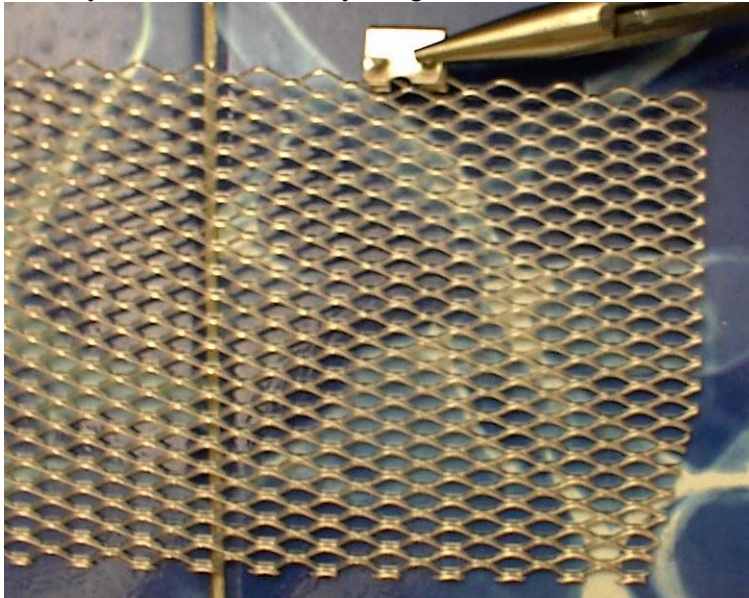

- d. Repeat for the other side
e. The outer bottom pieces will have precut sections for the clips with cuts on either side of the two diamonds that are needed for clips.
f. Install the clips like in step b & c
g. Next push the clips forward so that they look like the pictures below.

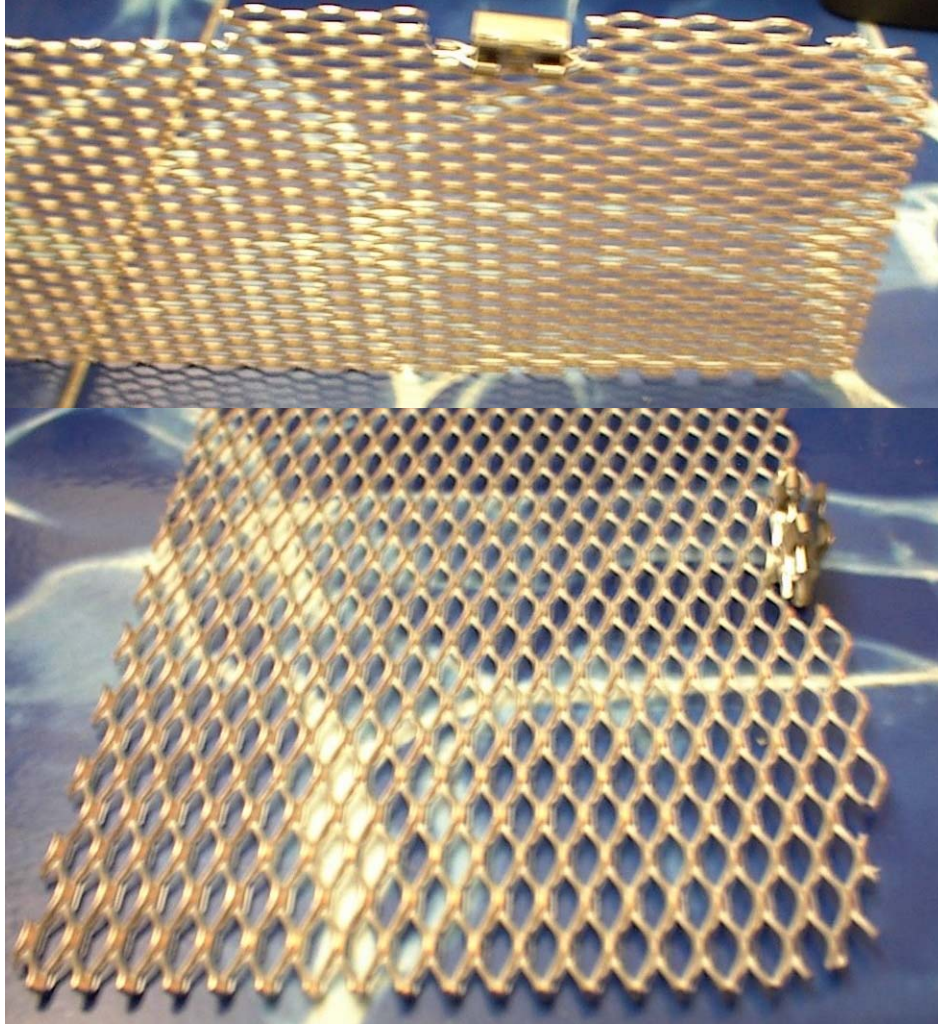

4. The bottom inserts will now just clip in and their holding places should roughly be where this symbol is located. ↩ If you feel the clips do not provide enough support, please reinforce w/ adhesive at the bottom.
5. Please email me w/ any questions.