



www.customcargrills.com
info@customcargrills.com

customcargrills.com LLC
PO Box 90004
Grand Rapids, MI 49509
(616) 889-2985

Year: 2012-2013
Make: Honda
Model: CR-V

INSTALLATION INSTRUCTIONS



What's in the Box: (1) Mesh Grill Piece, (8) Ties, (8) Adhesive Bases.


Tool List: Wire Cutters, Flat Head Screwdriver.

Lower Bumper Mesh Installation:

Remove the four plastic push rivets holding the two parts of the lower bumper together. These push rivets can easily be removed using a flathead screwdriver.



Separate the two lower bumper sections and slide the mesh into position.

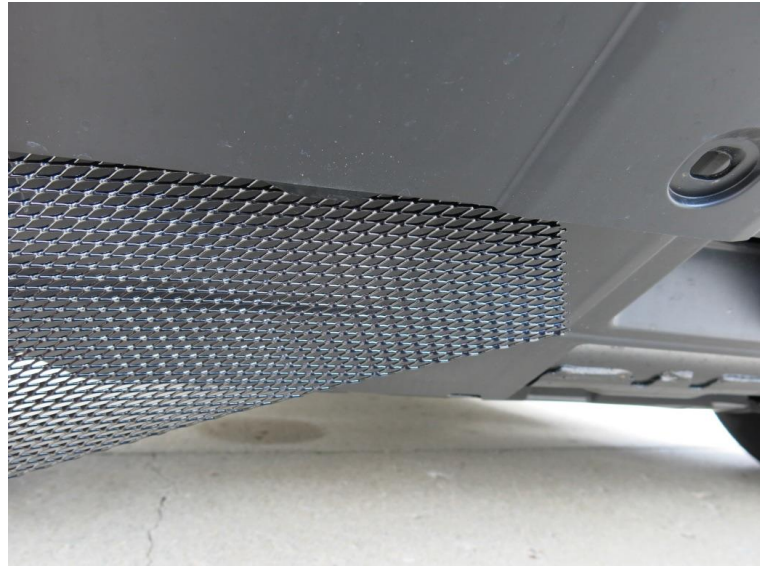

Place a cable tie holder on the inside of the bumper in the areas marked below. Run a tie through the holder and the mesh. Secure together tightly, and trim. Reinstall push rivets.



Tie Holder Positioning

PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs. customcargrills.com llc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to info@customcargrills.com .