



www.customcargrills.com
info@customcargrills.com

customcargrills.com LLC
PO Box 90004
Grand Rapids, MI 49509
(616) 889-2985

Year: 2003-2005
Make: Chevy
Model: Cavalier

INSTALLATION INSTRUCTIONS




What's in the Box: (2) Upper Bumper Mesh Grills, (2) Lower Bumper Mesh Grills, (8) Clips

Tool List: Needle nose pliers


Read full instructions before installation.

Lower Bumper Mesh Assembly:

1. Take 2 clips for one section.
2. Hook the two prongs from the clip around the two adjacent diamonds. There are precut areas on the grill for these that are about 4-5 diamonds away from the edge on one side and about a dozen on the other side.
3. Clamp down on the hook until it meets the back.

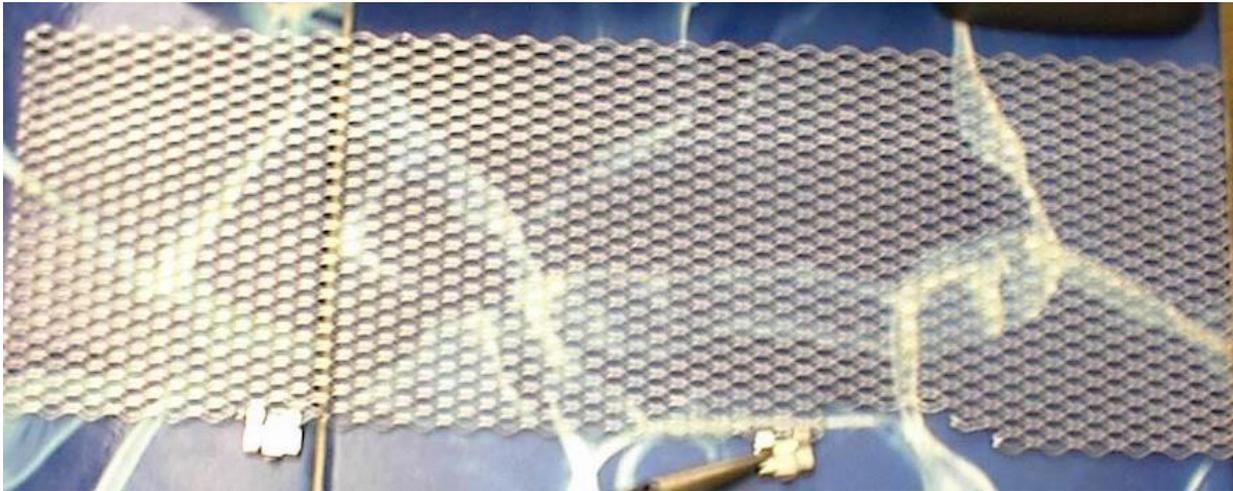

4. Now turn the grill around and tighten down the clamping part of the clip to the desired tension. Just take your pliers and close the gap down as far as you want. If you don't tighten them down enough, they will not hold and if you tighten them too much it will be hard to install.

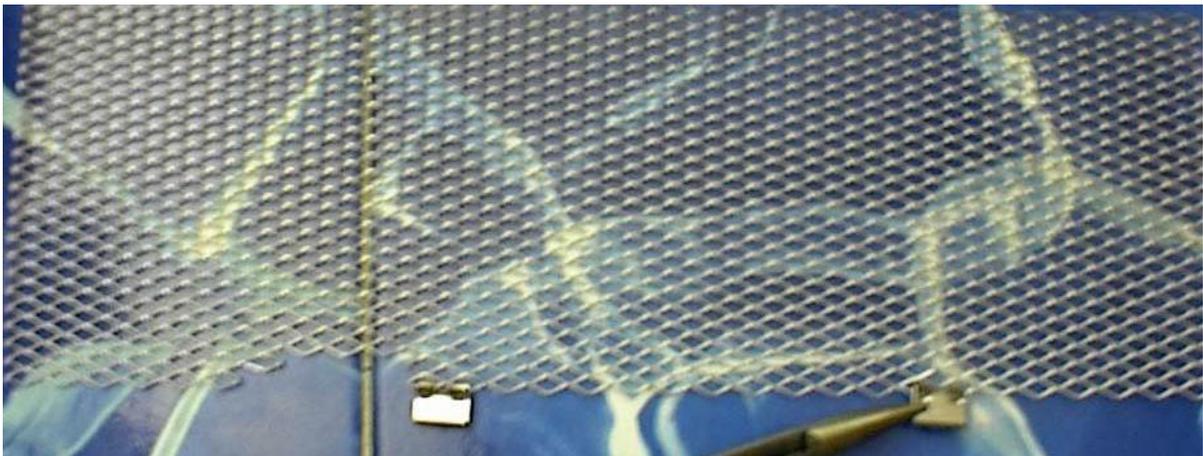

5. Push the clips forward so they look like this.




6. Repeat for other bottom grill.

Upper Bumper Mesh Assembly:

1. Take 2 clips for one section.

2. Hook the two prongs from the clip around the two adjacent diamonds. There are precut areas on the grill for these that are about 5-6 diamonds away from the edge.

3. Clamp down on the hook until it meets the back.

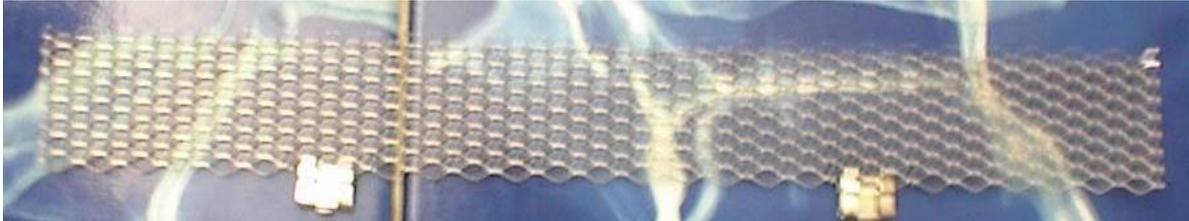

4. Now turn the grill around and tighten down the clamping part of the clip to the desired tension. Just take your pliers and close the gap down as far as you want. If you don't tighten them down enough, they will not hold and if you tighten them too much it will be hard to install.

5. Push the clips forward

6. Repeat for other top grill

Bumper Mesh Installation:

1. Put the grill inserts behind the openings and center the grill insert and push the clips onto the existing grill. You may have to get under the car to accomplish this.

2. The bottom pieces have notches in them to accommodate the stock bulge in the bumper. Place the pieces accordingly.


3. The top pieces will require removal of the splash guard first.



4. The push screws are located in the circled areas or possible elsewhere depending on model.

5. Remove the splash guard and install the grills on the plastic lip from behind.

6. The clips should be near the arrows here:

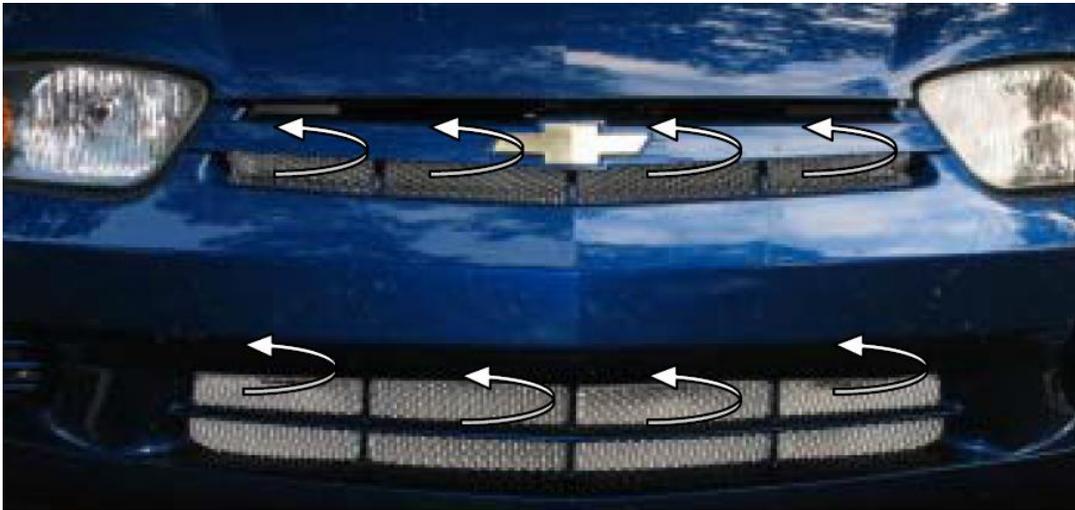

7. Reinstall the splash guard and enjoy.

PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs. customcargrills.com llc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to info@customcargrills.com .