



[www.customcargrills.com](http://www.customcargrills.com)  
[info@customcargrills.com](mailto:info@customcargrills.com)

customcargrills.com LLC  
PO Box 90004  
Grand Rapids, MI 49509  
(616) 889-2985

Year: 2000-2002  
Make: Dodge  
Model: Neon RT

## INSTALLATION INSTRUCTIONS



**What's in the Box:** (5) Mesh Grill Inserts, (8) Clips.




**Tool List:** Needle nose pliers, 13/32 Socket, 5/16 Socket, Ratchet, Adhesive, Wire Ties.

### Grill Mesh Installation:


1. Start the assembly.

a. Take 4 clips and install them on the bottom grill sections

b. Thread the clip ends around two adjacent diamonds and clamp down on the hook part as pictured.

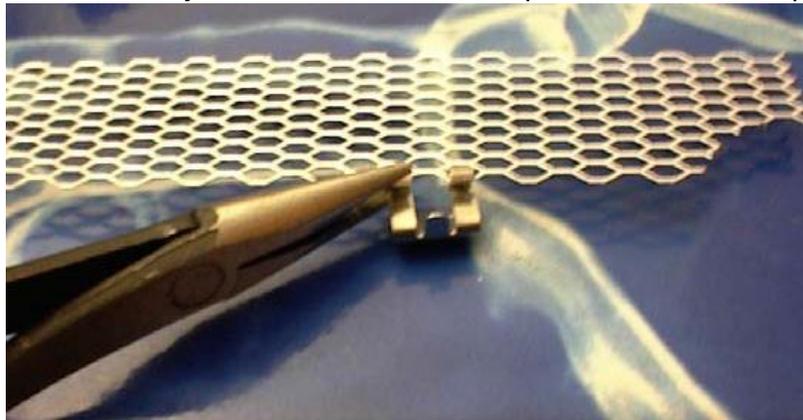

c. Then tighten down the backing as pictured.

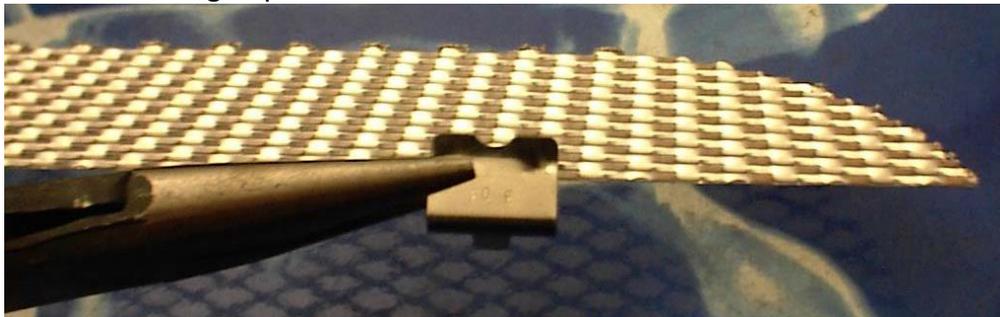

d. The tighter you clamp on the back the better the hold will be, but do not clamp down too hard or it will be difficult to install.


e. Your finished bottom grill should look like this:




f. Repeat the same process on the other piece that looks like a mirror image of the one you just did.

g. Repeat the same process with the remaining 3 clips on the top of the long bumper piece. Place one in the center and the additional 2 halfway between the center and the end.

2. Start the installation by opening your hood.
3. Remove the two screws at the top of the upper grill.
4. Take your front end off by gently pulling where indicated with purple circles with a flathead screwdriver under the grill in between the front bumper.

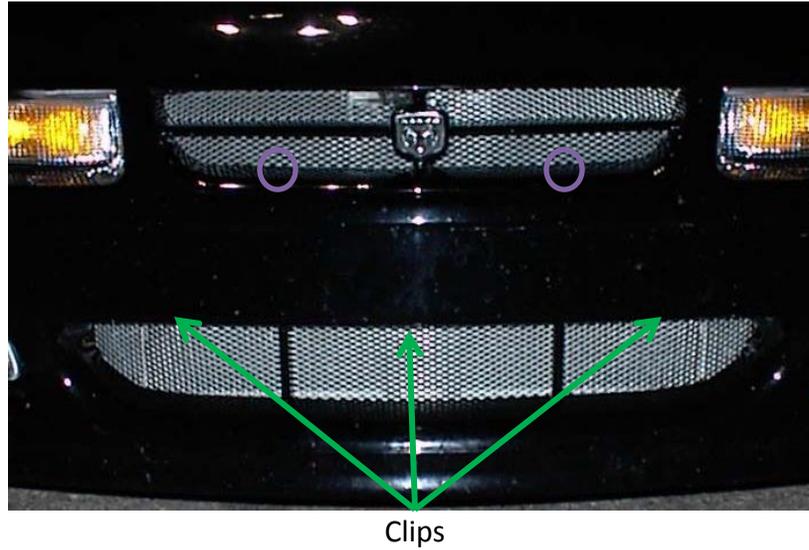

5. Remove the grill from the car.
6. The grill should be placed somewhere clean and placed face up.
7. Take the two grill inserts that have clips and attach them to the lower part of the existing grill from the inside.
8. The two other inserts are also placed from behind but need to be adhered to the grill with an adhesive. We suggest Automotive Goop but feel free to use an epoxy or other adhesive of your choice. Place the insert in position and wire tie them to the grill by running them through the inserts and around the grill. Then run a bead of the adhesive around the edge of the grill like pictured on the next page. Use the directions on the bottle for a proper seal.
9. Make sure your inserts look like this:

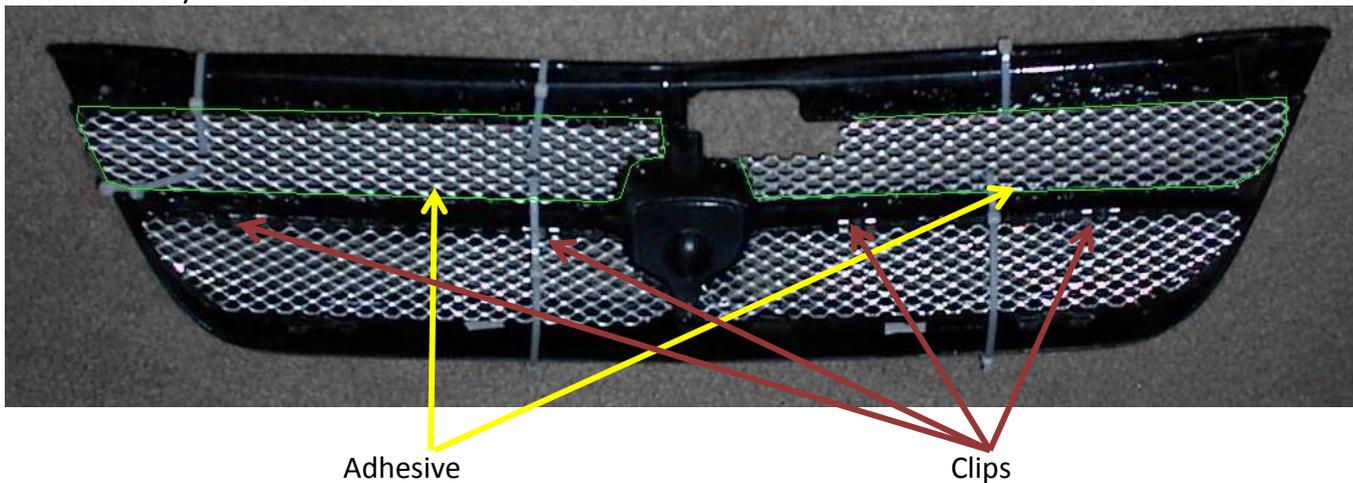

10. While that is drying take the sockets and take the plastic flap off from underneath the car. There should be a dozen screws that will be holding this piece up.

11. Once it is removed, then slide the long mesh piece up through the bottom of the bumper and make sure that it is facing so the clips will clip onto the bumper or else you will have to turn it around. Once it is in position, then just press the insert onto the existing bumper. The clips should roughly be where highlighted on the first page.

12. Reinstall the splash guard on the bottom of the car.

13. Reinstall the top part of the grill and enjoy.

PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs. customcargrills.com llc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to [info@customcargrills.com](mailto:info@customcargrills.com) .