



www.customcargrills.com
info@customcargrills.com

customcargrills.com LLC
PO Box 90004
Grand Rapids, MI 49509
(616) 889-2985

Year: 2011-2014
Make: Subaru
Model: Impreza WRX

INSTALLATION INSTRUCTIONS




What's in the Box: (2) Grill Mesh Pieces, (8) Ties.

Tool List: Flathead & Phillips Screwdriver, Drill and 3/16" Drill Bit.

Mesh Installation:

1. Remove the bumper. A good video on how to do this is here: <http://www.youtube.com/watch?v=qDtoEbxT6LM>
2. Remove the top factory grill assembly.
3. Separate the grill assembly and remove the factory mesh. Replace with new customcargrills mesh.

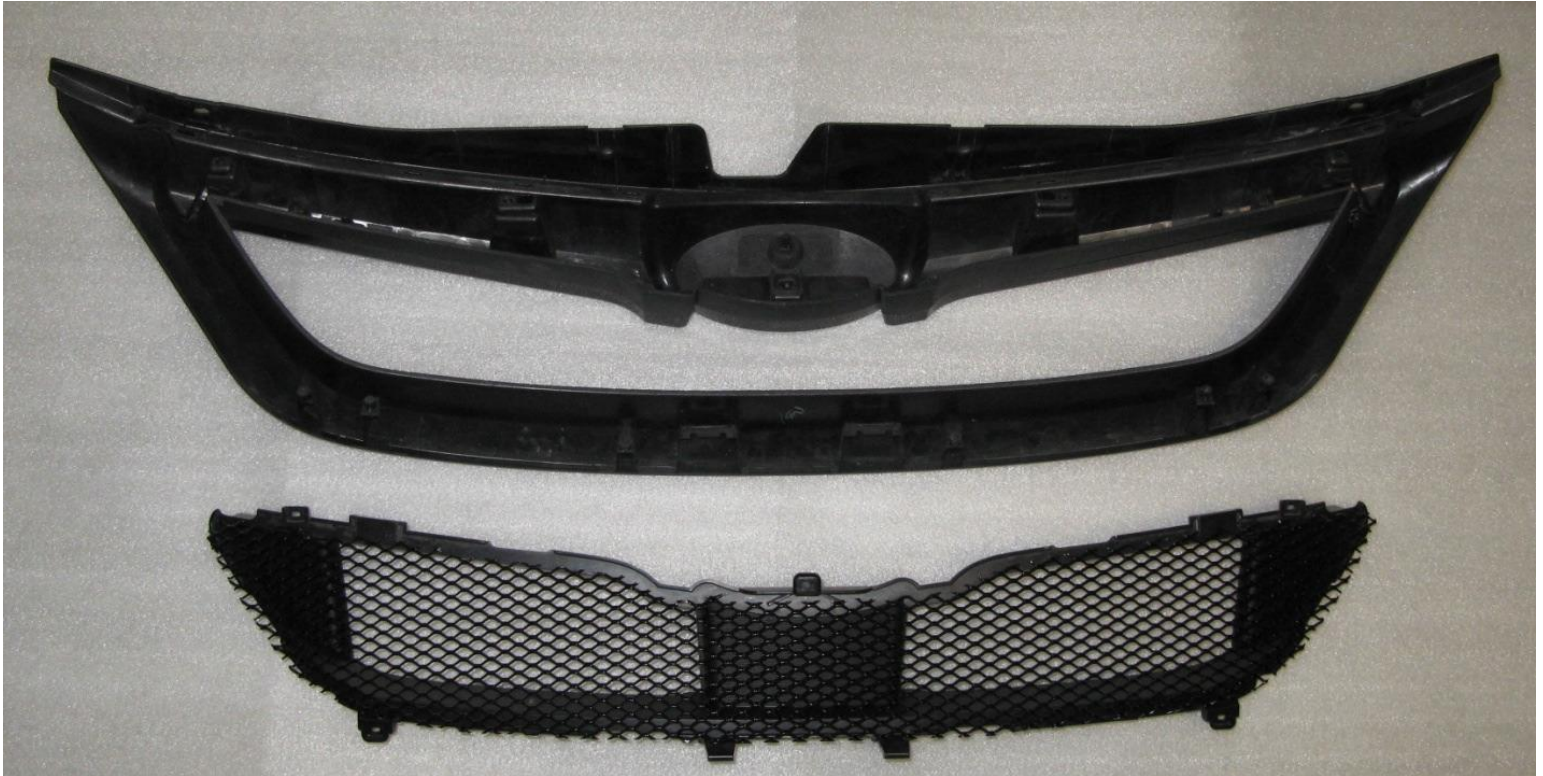

4. Fasten then grill assembly back together and reinstall it back on the bumper.



5. For the lower piece, test fit the mesh in the bumper opening. Drilling will be needed on the vertical center pillar as well as the sizes to hold the mesh in place.

6. Below are some areas we used cable ties to fasten the mesh to the bumper.



Drill a hole above and below a strand of metal, then loop a tie (starting from behind the bumper) through the bumper and around the metal strand. Fasten the ties and trim excess.

PLEASE NOTE: The instructions provided are the suggested installation method. If you feel that the installation instructions are inadequate or unsafe then please feel free to develop your own installation techniques that fit your exact needs. customcargrills.com llc is not liable for any personal or property damage resulting from our products. If you have any suggestions on how to improve our installation instructions then please email your comments to info@customcargrills.com .